
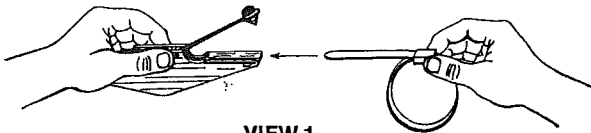




Strapbinder®

Center Punch Tool HBC-038

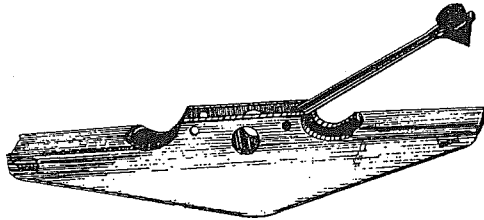


VIEW 1

Push end of Clamp completely into slotted end of CLAMP-TOOL. For 3/8" width Clamp use narrow slotted end.




VIEW 2

Push Winder into Frame with slot engaging Clamp end. Ratchet wrench attached to winder.

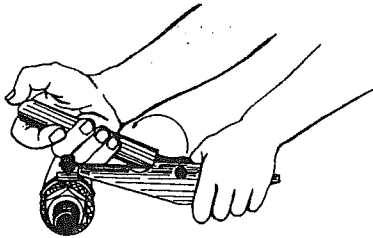


VIEW 3

Push forward with sufficient strokes until desired tension is obtained.

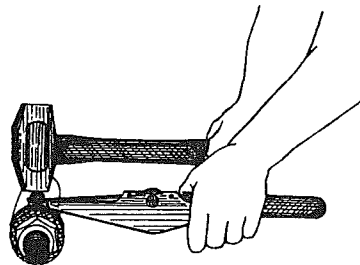


VIEW 4

Push punch down on LOK and while holding tension with Wrench, strike firm blow with hammer, thus locking the Clamp.

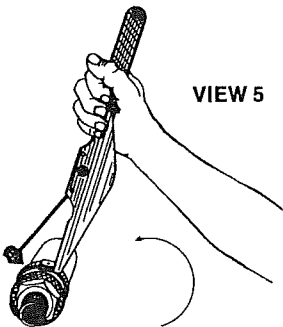

VIEW 5

Raise punch and while holding tension with Wrench, swing Frame forward and up against edge of LOK, breaking off tail piece. (OPTIONAL) Peen corners of LOK smooth. Twist up tail and when it is free, pull out the Winder. To move punch from one end to other end, squeeze legs of punch holder and reengage in holes at opposite end.

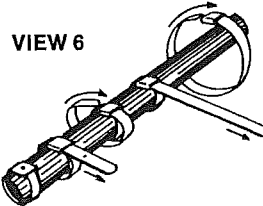

VIEW 6

NOTE:

On applications such as glass, radiator spud or objects where punching would be injurious, pull tension — raise CLAMP-TOOL to bend strip at right angle — remove winder — clip off 1/4 inch above the bend — fold end, close over LOK.

To use Open End Clamp, wrap and lace the Clamp twice around, threading each wrap through the LOK, apply CLAMP-TOOL and use as above.

Ideal Clamp Products, Inc.
Global Headquarters
8100 Tridon Drive
Smyrna, TN 37167
IDEALTRIDON.COM

PROVEN DESIGNS | BILLIONS OF TIMES



Ph: 800-251-3200
Fax: 615-223-1550
STRAPBINDER.COM

©2016 Ideal Clamp Products, Inc.