



Strapbinder®

HBC-300


Center Punch Tools

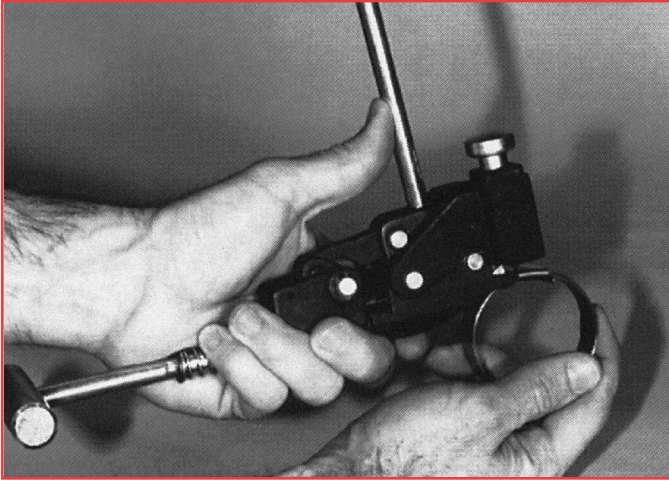

1) Push ball handle forward. This will open the front slot. Insert clamp tail and tension by lifting and lowering tension handle.

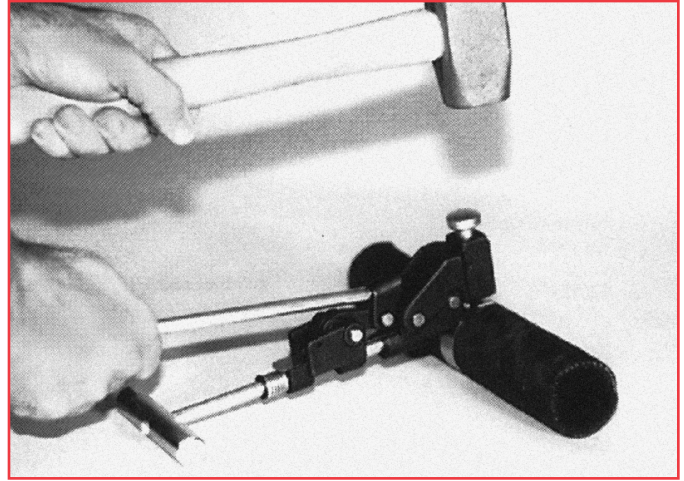


2) When sufficient tension has been reached, secure the clamp by lowering the punch head onto the lock and strike a minimum of 2 times with a 2 lb. mallet.

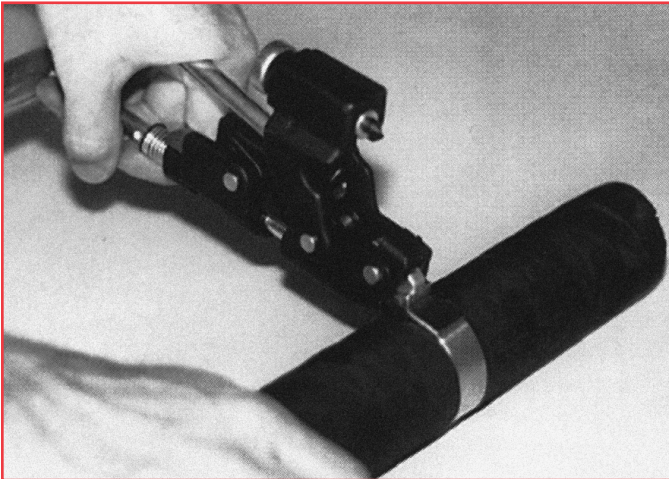

3) Apply forward and backward movements of the tool to break off the clamp tail.

4) Remove the tail by ratcheting the ball handle. Raise handle and pull tail free.

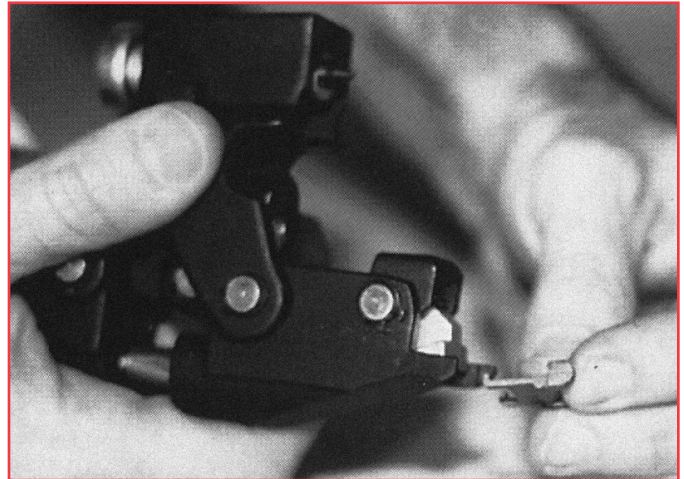

HBC-032 3/8" adapter can be purchased separately and inserted into front of tool for use with 3/8" wide clamps.